CTP STITCH TIE INSTALLATION

Reconnecting Multi Wythes Brick

Distance between connecting wythes

Stitch through cracked headers

Pilot hole
through header brick

ANCHOR LENGTH = TOTAL EMBEDMENT DEPTH

Pilot hole
through joint in outer wythe (preferred)

Pilot hole
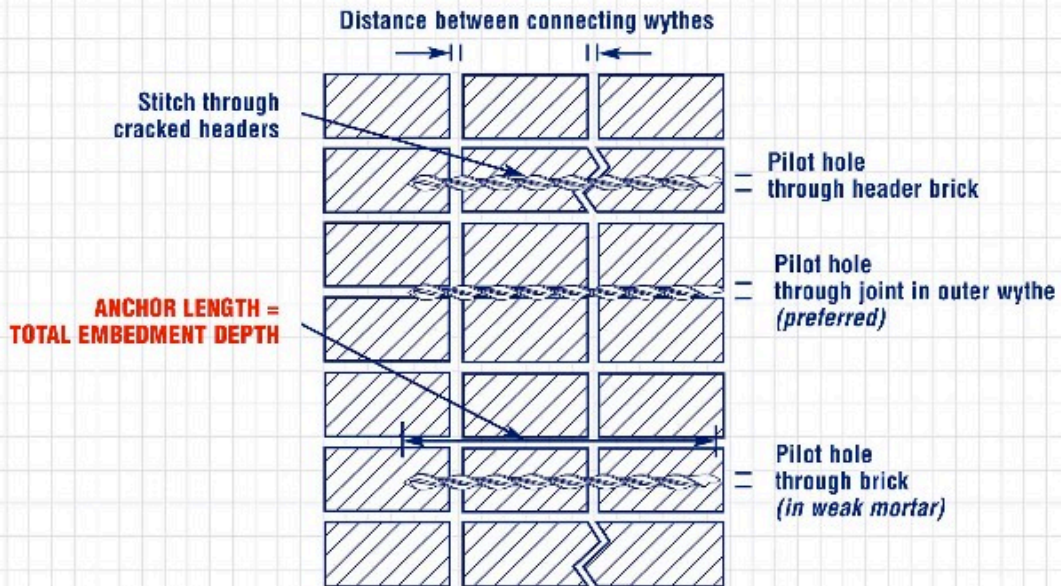through brick
(in weak mortar)

NOTE: Pilot hole depth should be greater than anchor length by 1" minimum.